




Runabout[®] Manual Downrigger

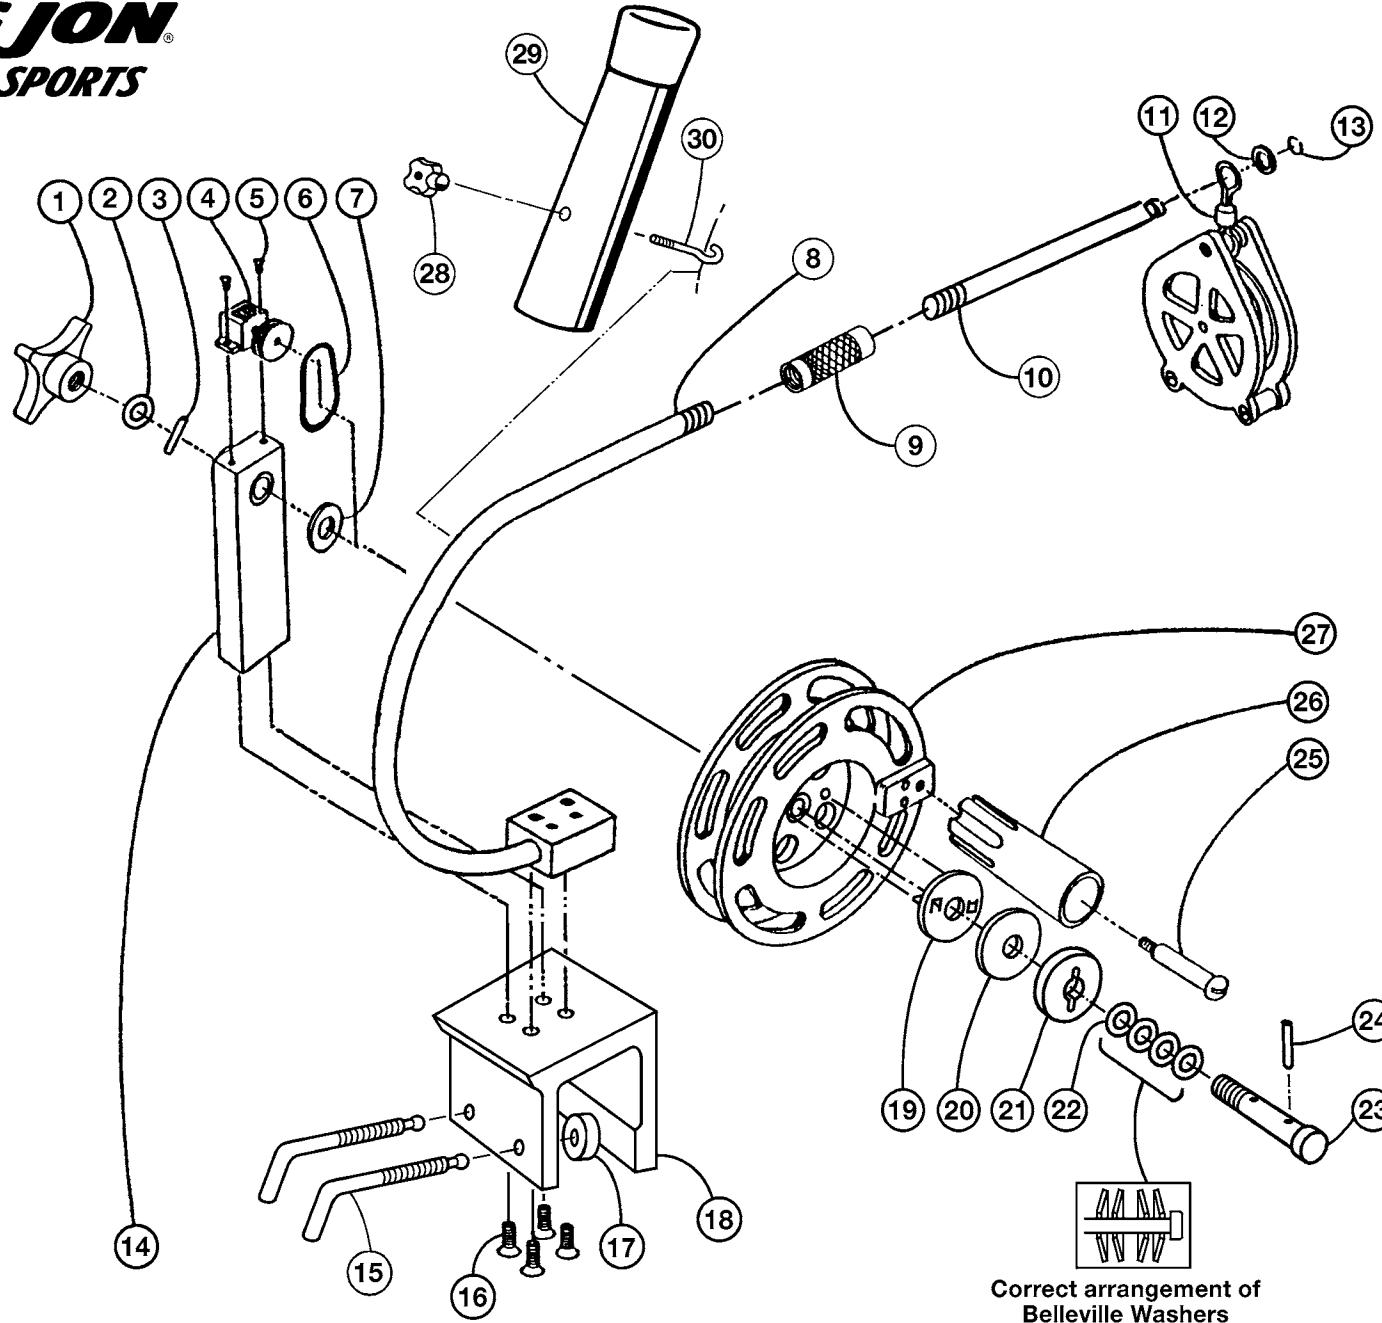

Parts List MD00320

Detail No.	Description	Qty.	Order By Part No.
1	Clutch Knob	1	51152
2	Belleville Washer	1	2231
3	1/8 x 1 in. Roll Pin	1	2175
4	RH Counter w/ Med. Wheel	1	FC600JD88
5	Counter Screws	2	2014
6	Counter Spring / Small	1	2284
7	1/2 in. I. D. Washer	1	2238
8	J-Rod & Block Assembly	1	MDJROD/ASM
9	Rod Collar	1	51044
10	10-1/2 in. End Rod	1	51123
11	5 Spoke Tip Assembly	1	BJ3049
12	Aluminum Tip Retainer	1	51043
13	Tip Retainer Ring	1	2181
14	318 Upright w/ Bushing	1	51299
15	Clamp Handle	2	51113
16	1/4-20 x 3/4 in. Flat Head Screws	4	2009
17	Clamp Handle Pads	2	51069B
18	Clamp Base	1	51295
19	Inner Clutch Disk	1	51098
20	Graphite Pad	1	2307
21	Outer Clutch Disk	1	51093
22	Belleville Washers	4	2231
23	Inner Shaft	1	51757
24	3/16 x 3/4 in. Dowel Pin	1	2165
25	Bolt w/ Sleeve	1 ea.	2005/51085
26	Handle	1	51161
27	6 in. Reel	1	51174C
28	Mounting Knob	1	51172
29	Rod Holder Tube & Cap	1	51045
30	Mounting Hook	1	2501